


NP-Series - Valve Regulated Lead Acid Battery

NP12-6

SPECIFICATIONS		
Nominal voltage	6	V
20-hr rate Capacity to 1.75VPC at 20°C	12	Ah
10-hr rate Capacity to 1.75VPC at 20°C	11.1	Ah
DIMENSIONS		
Length	151 (±1)	mm
Width	50 (±1)	mm
Height		mm
(height over terminals)	97.5 (±2)	mm
Mass (typical)	2.05	kg
TERMINAL TYPE		
FASTON (Quickfit / release)	6.35	mm
OPERATING TEMPERATURE RANGE		
Storage	-20°C to +60°C	
Charge	-15°C to +50°C	
Discharge	-20°C to +60°C	
STORAGE		
Capacity loss per month at 20°C (approx)	3	%
CASE MATERIAL		
Standard Option	ABS (UL94:HB)	
Flame retardant option (FR)	ABS (UL94:V0)	
CHARGE VOLTAGE		
Float charge voltage at 20°C	6.825 (±1%)	V
	2.275 (±1%)	V/cell
Float Charge voltage temperature correction factor (for variations from the standard 20°C)	-3	mV/cell/°C
Cyclic (or Boost) charge at 20°C	7.26 (±3%)	V
	2.42 (±3%)	V/cell
Cyclic Charge voltage temperature correction factor (for variations from the standard 20°C)	-4	mV/cell/°C
CHARGE CURRENT		
Float charge current limit	No limit	A
Cyclic (or Boost) charge current limit	3	A
MAXIMUM DISCHARGE CURRENT		
1 second	360	A
1 minute	75	A
SHORT-CIRCUIT CURRENT & INTERNAL RESISTANCE (according to EN IEC 60896-21)		
Internal resistance	N/A	mΩ
Short-Circuit current	N/A	A
IMPEDANCE		
Measured at 1 kHz	15	mΩ
PERFORMANCE & CHARACTERISTICS		
Refer to the technical manual	NP	
DESIGN LIFE		
EUROBAT Classification: Standard Commercial	3 to 5	years
Yuasa design life @ 20°C	up to 5	years
SAFETY		
Installation	Can be installed and operated in any orientation except permanently inverted	
Handles	Batteries must not be suspended by their handles (where fitted)	
Vent valves	Each cell is fitted with a low pressure release valve to allow gasses to escape and then reseal.	
Gas Release	VRLA Batteries release hydrogen gas which can form explosive mixtures in air. Do not place inside a sealed container	
Recycling	YUASA's VRLA batteries must be recycled at the end of life in accordance with local and national laws and regulations	

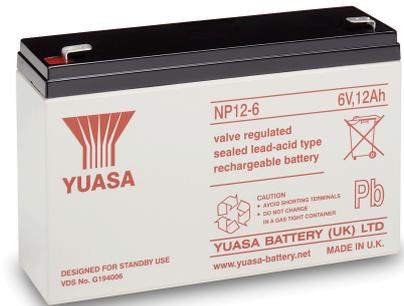

LAYOUT



3RD PARTY CERTIFICATIONS

ISO 9001 - Quality Management Systems
 ISO 14001 - Environmental Management Systems
 EN 18001 - OHSAS Management Systems
 UNDERWRITERS LABORATORIES Inc.
 VdS (Germany) - VdS No: G194006



STANDARDS

IEC61056



ALL DATA IS SUBJECT TO CHANGE WITHOUT NOTICE

Issue No.: V.2 / Issue Date: March 2011



YUASA BATTERY SALES
 UK LTD.
 Unit 13, Hunts Rise
 South Marston Industrial
 Estate
 Swindon
 SN3 4TG